

REMOTE CONTROL KIT FOR THE CIS-30

1. INSTALL THE DIODES IN CR6 AND CR7
2. INSTALL THE 10K RESISTORS IN R25 AND R26
3. INSTALL THE 14PIN DIP SOCKETS IN KA AND KB
4. INSTALL THE 7400 IC IN Z11
5. SOLDER ALL CONNECTIONS
6. CONNECT THE CASSETTE PLAYER REMOTE CONTROL LINE TO REAR CONNECTOR PINS 2 AND 3
7. CONNECT THE CASSETTE RECORDER REMOTE LINE TO REAR CONNECTOR PINS 5 AND 6
8. CONNECT REAR CONNECTOR PIN 9 (RY) TO THE DECODED "PUNCH-ON" PULSE (⌋) FROM AN EXTERNAL DECODER SUCH AS THE SWTP CURSOR CONTROL CARD. IT MAY ALSO BE CONNECTED TO AN OUTPUT FROM THE PARALLEL INTERFACE CARD (MP-L)
9. CONNECT REAR CONNECTOR PIN 8 TO THE DECODED "PUNCH-OFF" PULSE (⌋) FROM EXTERNAL DECODER SUCH AS THE SWTP CURSOR CONTROL CARD. IF YOU ARE CONNECTING TO A PARALLEL INTERFACE CARD (MP-L) CONNECT THIS PIN TO GROUND (PIN 7)

REFER TO APPENDIX B IN THE INSTRUCTION MANUAL FOR OPERATING INFORMATION.